INSTALLATION INSTRUCTIONS

A WARNING

To properly install this warning light you should have a good understanding of automotive electrical procedures and systems, and proficiency in the installation of warning lights. **IF YOU DO NOT, PLEASE SEEK PROFESSIONAL ASSISTANCE.**

BEFORE INSTALLATION:

Estimated Time: 30 Minutes

Tools Needed: Wrench

Wire Functions: Black = Ground

Red = Power

In the Box: 1. 1x) Model 892 LED Compact Work

Light Pedestal Mount

2. (1x) Mounting Bolt

3. (1x) Mounting Bracket

4. (1x) Lock Washer

5. (1x) Hex Nut

6. (1x) Hex Locknut

7. (1x) Screw Cap

Input Voltage: 12-24V DC

Operating Voltage: 9-30V DC

PRE-INSTALLATION INSTRUCTIONS:


- 1. Read all safety notes and mounting guidelines before installing the product. Verify that all parts listed under "In the Box" are present and complete.
- 2. Inspect the product for damage. DO NOT install the product if there is any damage. Contact the authorized retailer where you purchased it to initiate a warranty claim if there is damage.
- 3. Verify that all power supply and/or charging systems comply to the specified voltage limits for the light.

NOTES:

In using this guide, you agree J.W. Speaker is not responsible for any damage, misuse, or personal injuries. This document is intended as an educational guide only and does not make guarantees on any finished results.

To properly install this light you should have a good understanding of automotive electrical procedures and systems, and proficiency in the installation of lights.

IF YOU DO NOT, PLEASE SEEK PROFESSIONAL ASSISTANCE.

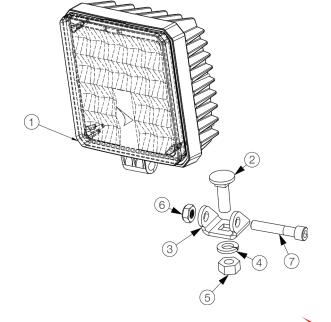



▲ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov ▲ AVERTISSMENT: Cancer et effet nocif sur la reproduction - www.P65Warnings.ca.gov

PRODUCT WARRANTY:

If you have issues with a J.W. Speaker product, please contact the authorized retailer where you purchased it.

INSTALLATION INSTRUCTIONS:

BEFORE BEGINNING: J.W. Speaker's Model 892 LED Compact Work Light is intended for the agriculture, construction, & mining markets.

- 1. First mount light to the vehicle. Insert the mounting bolt (#2) through the bracket and desired location on vehicle. Add washer (#4) to the bolt, then tighten a hex nut (#5) to the bolt.
- 2. Take the screw cap (#7) and thread threw the mounting bracket on the Model 892 LED Compact Work Light and tighten with the hex locknut (#6) onto the screw cap.
- 3. Plug in the provided wire harness (#8) into the back of the light.
- 4. Test to make sure the light is working.
- 5. Aim Model 892 LED Work Light as desired.