



### PRE-INSTALLATION INFORMATION

<b>Estimated Time</b>	15 minutes
<b>Tools Needed</b>	Screwdriver
<b>In the Box</b>	(x1) Model 406 Strobe Light
<b>Wire Functions</b>	Black = Ground (Negative) Red = Power (Positive) Yellow = Mode
<b>Input Voltage</b>	12-80V DC
<b>Operating Voltage</b>	9-110V DC
<b>Input Current</b>	0.915 A RMS @ 12 VDC 0.190 A RMS @ 72 VDC
<b>Hardware Required</b>	(x4) M5 Screws OR #8 Screws

### Regulatory Compliance



### Pre-Installation Guidelines

1. Read all safety notes and mounting guidelines before installing the product. Verify that all parts listed under "In the Box" are present and complete.
2. Inspect the product for damage. **DO NOT** install the product if there is any damage. Contact the authorized retailer where you purchased it to initiate a warranty claim if there is damage.
3. Verify that all power supply and/or charging systems comply to the specified voltage limits for the light.

### Installation Instructions

1. Turn off the equipment and disconnect the power supply.
2. Ensure that the light is mounted to/on a FLAT, SOLID surface of the same (or larger) size as the bracket or light. This will prevent warping or distortion that can cause cracking or damage to the light and/or bracket.
3. Secure it to the mounting surface. The base is approximately 5.12" diameter with 4.38" diameter bolt circle (90 degrees, 4 places).
4. Carefully connect the wires using the "Wire Functions" and "Voltage" information above to power the light. The strobe is protected against damage from reversing input connections.
5. All connections should be adequately protected against moisture. Shrink tubing is recommended.
6. Lay and secure wiring/connectors to avoid any pulling or abrasion that may damage the wires.
7. Frequently check the light to make sure that it is working properly and is securely attached.

### PRODUCT WARRANTY:

**If you have issues with a J.W. Speaker product, please contact the authorized retailer where you purchased it.**

**Installation Guidelines**

**FLASH SETTINGS FOR NON-ECE REGULATIONS USE:**

With the **RED** wire connect to the positive source and the **BLACK** wire connected to the nevasive source, briefly touch the **YELLOW** wire to the positive source to change the flash mode of the lamp. Flash modes are listed below:

**FLASH MODES**

**OUTPUT PULSE PATTERNS**

**MODE 1: ROTATING BEACON**

**MODE 2: QUADRUPLE**  
**480 FPM**



**MODE 3: FAST**  
**540 FPM**



**MODE 4: DOUBLE**  
**240 FPM**



**MODE 5: BURST**  
**300 FPM**



**MODE 6: STEADY FLASH**  
**60 FPM**

