


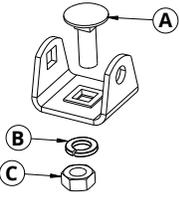

### PRE-INSTALLATION INFORMATION

<b>Estimated Time</b>	30 minutes
<b>Tools Needed</b>	M13 Wrench (for Mounting and Aiming)
<b>In the Box</b>	(x2) Model 6150 J Series Fog Lights
	<b>Pre-Installed on Lights:</b> <b>A.</b> (x2) M8-1.25x25 Mounting Bolt <b>B.</b> (x2) M8 Split Lock Washer <b>C.</b> (x2) M8-1.25 Hex Nut
	<i>Single lights come with half of the above parts</i>
<b>Wire Functions</b>	Black = Ground Red = Power
<b>Input Voltage</b>	12V DC
<b>Operating Voltage</b>	10-15V DC

### Regulatory Compliance



### Pre-Installation Guidelines

1. Read all safety notes and mounting guidelines before installing the product. Verify that all parts listed under "In the Box" are present and complete.
2. Inspect the product for damage. **DO NOT** install the product if there is any damage. Contact the authorized retailer where you purchased it to initiate a warranty claim if there is damage.
3. Verify that all power supply and/or charging systems comply to the specified voltage limits for the light.

#### PRODUCT WARRANTY:

**If you have issues with a J.W. Speaker product, please contact the authorized retailer where you purchased it.**

To properly install this light you should have a good understanding of automotive electrical procedures and systems, and proficiency in the installation of headlights. **IF YOU DO NOT, PLEASE SEEK PROFESSIONAL ASSISTANCE.**

### Installation Instructions

1. Turn off the vehicle and disconnect the battery.
2. Remove and disconnect any existing fog lights from the bumper.
3. Carefully connect the wires or connector using the "Wire Functions" and "Voltage" information above. All connections should be adequately protected against moisture. Shrink tubing is recommended.
4. Lay and secure the wiring so that no pulling or abrasion can occur. Wires should be adequately secured to avoid damage.
5. Install the fog light with the provided hardware on to the bumper, with the J.W. Speaker logo oriented at the bottom.
6. Aim the lights.