

# FOG LIGHT AIMING INSTRUCTIONS

## FOG LIGHTS MUST BE AIMED AFTER INSTALLATION

Fog Lights must be securely mounted and properly aimed such that the beam pattern “cut off line” complies with all applicable regulations.

**If you are not familiar with the legal requirements for aiming your headlights, please see a professional service provider.**

J.W. Speaker is not liable for any damage to the vehicle or light, or any tickets/citations as a result of using these guidelines.


### BEFORE INSTALLATION:

1. Vehicle is being aimed on a level surface.
2. All tires are properly inflated.
3. Vehicle is at normal driving height (applicable to vehicles with hydraulic lifts).

**NOTE:** Fog Lights must be AIMED AGAIN if a lift kit is added or removed from the vehicle.


### KEY TERMS:

**Hot Spot:** The brightest part of the pattern, usually in the center.

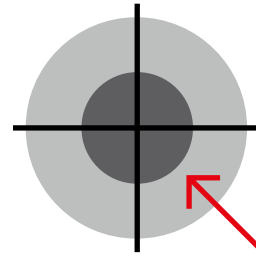

### AIMING GUIDELINES:

**Driving Lights** or High Beams should be aimed so the hot spot is about 1.5 inches BELOW the centerline of the lights.

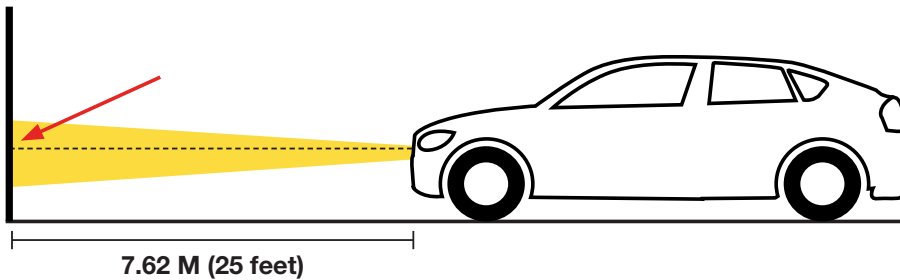

**Fog Lights** should be aimed so the top of the beam is about 4 inches BELOW the level line of the lights.

