

# INSTALLATION INSTRUCTIONS

## ⚠ WARNING

To properly install this light you should have a good understanding of electrical procedures and systems. **IF YOU DO NOT, PLEASE SEEK PROFESSIONAL ASSISTANCE.**

### BEFORE INSTALLATION:

**Estimated Time:** 90 minutes

**Tools Needed:** 5mm Hex Key  
15mm Wrench  
T20 Torx Wrench  
For Wiring:  
Heat Gun  
Wire Stripper/Crimper

**Wire Functions:** Black = Ground  
Red = Power

**In the Box:**


1. (12x) M4 Bezel Screws
2. (2x) Outer Bezels
3. (6x) Outer Lens
4. (4x) Lock Washers
5. (4x) 1/4" Bolts
6. (2x) Mounting Bolts
7. (2x) Brackets
8. (2x) Hex Nuts
9. (2x) Trail 6 Pro/Sport Lights
10. (2x) Mounting Washers
11. (2x) Quick Disconnect Harnesses

**Input Voltage:** 12V DC

**Operating Voltage:** 9-16V DC

### PRE-INSTALLATION INSTRUCTIONS:

1. Read all safety notes and mounting guidelines before installing the product. Verify that all parts listed under "In the Box" are present and complete.
2. Inspect the product for damage. DO NOT install the product if there is any damage. Contact the authorized retailer where you purchased it to initiate a warranty claim if there is damage.
3. Verify that all power supply and/or charging systems comply to the specified voltage limits for the light.

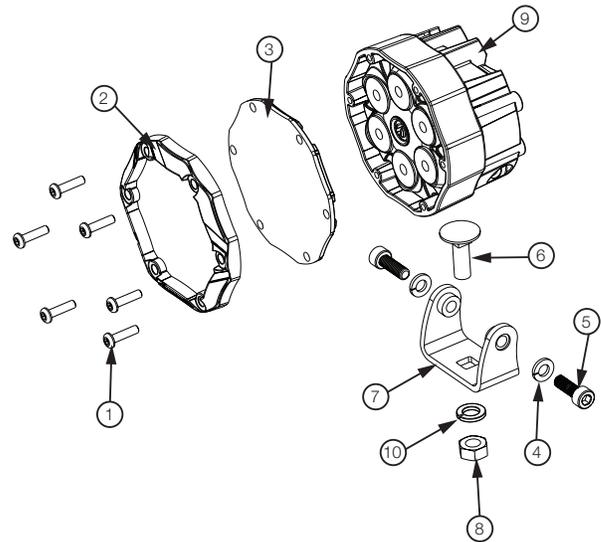

### IMPORTANT NOTES:

To properly install this light you should have a good understanding of automotive electrical procedures and systems, and proficiency in the installation of lights. **IF YOU DO NOT, PLEASE SEEK PROFESSIONAL ASSISTANCE.**


### PRODUCT WARRANTY:

If you have issues with a J.W. Speaker product, please contact the authorized retailer where you purchased it.




## INSTALLATION INSTRUCTIONS:


**1.** First choose between the Spot, Flood, or Wide Flood lens (#3) to install. Lay the lens flat on top of the light.

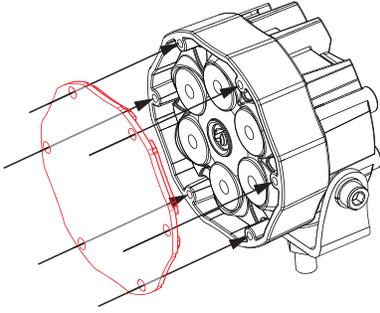

**2.** Place the outer bezel (#2) on the lamp over the lens. Be sure the J.W. Speaker logo on the outer bezel is oriented at the bottom of the lamp.

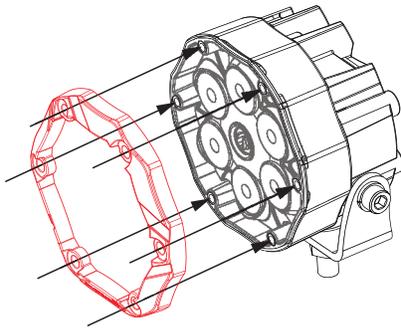

**3.** Take 6 of the M4 bezel screws (#1), place them in the holes of the outer bezel, and fasten the lens and bezel to the light using the T20 Torx Wrench. Repeat steps 1-3 on the light.

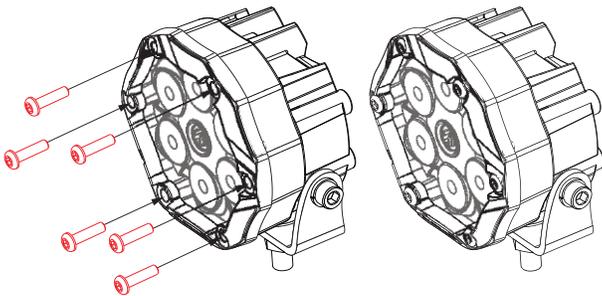

**4.** Once assembled, attach the light as a bracket, hanging, or panel mount to the vehicle. For hanging or bracket option: Insert the mounting bolt (#6) through the bracket, add a washer (#10) to the bolt under the bracket, then tighten a hex nut (#8) to the bolt.



**5.** Aim the Trail 6 as desired and fasten the side bolts (#5) using 5mm Hex Key. Plug in the provided harness into the back of the lamp.



**6.** Test to make sure the light is working. Now you're ready to hit the trails!



**J.W. SPEAKER**  
Engineered. Lighting. Solutions.